
Special Features

- Elegant appearance and easy to use.
- Multi-Code Player - Supporting MP1, MP2, MP3, WMA, formats.
- Driver Free U Disk - You may manage your files directly through “Portable Device” in “My Computer” on Windows 2000 Operating System or above without driver.

Brief View of Player

A. About player's battery

Player has an internal, non-user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 1 - 2 hours or until the charging LED lights go Off before you use it.

Charging the Battery

You can charge the Player's battery in two ways:

1. Connect player to your computer. Or,
2. Use the USB power charger. (available separately)

B. Insert Micro SD Memory Card

This device is design without an internal memory; put a Micro SD memory card insert into the memory card slot before use the player.

 
- Plug in the Micro SD memory card into player card slot at side, now you can use the player.
- You can upload your desired media files to the player, or, you can upload your desired media files to the Micro SD memory Card direct with your computer before insert it to the player.
- When you want to insert / remove the Micro SD memory card from memory card slot. Make sure the player is in Off status. Otherwise, the player functional

may dead halt or the internal data / files will be lost / damaged.

Note: The status indicator light will be flashing fast and then will go Off, when you want to turn On the player. However, the player will turn Off automatically If no memory card has inserted to player's card slot.

C. Key function of buttons


Appearance

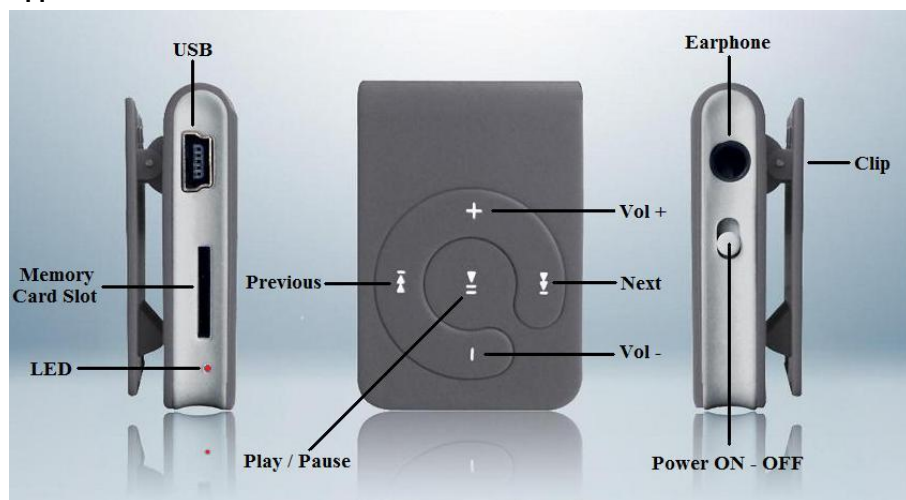


- **Power ON – OFF switch:** Main Power On and Off
- **▶▶ button:** To Play / Pause or Standby On / Off.
- **◀◀ button:** To previous song or fast-backward.
- **▶▶ button:** To the next song or fast-forward.
- **+** **button:** To increase volume level.
- **-** **Button:** To decrease volume level.
- **USB:** For PC connection and charge function

D. Getting start player


 


1 Turn On / Off

- 1.1 Plug in earphone set into player's jack
- 1.2 Slide the Power ON – OFF to “ON” position, the player will turn On and play music directly. (make sure the Micro SD memory card has plugged)
- 1.3 Press and hold  button, for about 2 - 3 second, the player will turn Off and On in standby mode.


 
2 Play / Pause Music

- 2.1 Press  button to pause the playing music, press it again to play.
- 2.2 If player is in pause state for 3 minutes, it will be turned to Off automatically.



3 Adjust Volume

- 3.1 Pressing  /  button to increase or decrease volume level.
- 3.2 Press and hold  /  button to increase or decrease volume level faster.

4 Play Next / Previous Music

- 4.1 In playing mode, press  button to select next music.
- 4.2 Press  button to select previous music.

5 Play Fast-Forward / Fast-Backward

- 5.1 In playing mode, press and hold  button to enter fast-forward mode.
- 5.2 Press and hold  button to enter fast-backward mode.

E. USB mode

1 Connect player to computer

- 1.1 Connect player to computer with the USB cable, then a “USB Mass Storage Device” is detected and related driver is installed by you computer. (Windows 2000 / XP System or about)
- 1.2 A removable disk drive will be shown in “My computer” folder, now you can start Read / Write operation. And the battery is charging in background.
- 1.3 In connection mode, the player can be play music if you press or pressing the play button. However, the player may stop or start playing if removing the PC connection.

2 Remove player from computer:

Please safety to removes the player in computer, otherwise, the data stored in the Player might loss.

- 2.1 If you're using a Windows PC, you can disconnect the player in My Computer or by clicking the “Safely Remove Hardware” icon in the Windows system tray.
- 2.2 If you're using a Mac, you can also disconnect player by dragging the player icon on the desktop to the Trash.
- 2.3 And now, is safe to disconnect the player with your computer, unplug the USB connector from player and then your computer.
- 2.4 If you're accidentally disconnect player without disconnect it, reconnect it to your computer.
- 2.5 At power ON mode, after remove the PC connection, the player will auto-play the music directly.

F. Indicator light function

- **Playing Mode:** LED light flashing once per second.

- **Pause Mode:** LED light bright.
- **PC Connecting Mode:** LED light bright. (Charging in background)
- **Recharging Mode:** LED light bright.
- **Recharge complete:** LED light will go OFF

G. Troubleshooting

Play cannot turn ON	<ul style="list-style-type: none">• Check whether battery have enough energy.• Check whether the main power ON-OFF to slide to ON position or not.
No sound is heard	<ul style="list-style-type: none">• Check whether Volume is set to “minimum” and connect the headphone plugs firmly.• Check whether the headphone plug is dirty.• Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.• Check whether music files format are support.
Download of music files fails.	<ul style="list-style-type: none">• Check whether player's USB connector is connected with computer properly.• Check whether driver is installed correctly.• Check whether the player's memory is in full.• Check whether the Micro SD memory card is inserted.

H. Specification

Dimension	43 mm (H) x 29.8 mm (W) x 15 mm (D)
Weight	14.5 g
PC Connection	USB 2.0 (High Speed)

Earphone Impedance	32 Ohm	
Internal Memory	Nil	
External Memory	Micro SD Memory Card (up to 8GB)	
Battery	Built-in Rechargeable Lithium battery (3.7V 110mA)	
	Playing Time: about 4-5 Hours	
Supports Music Format	MP3	32kbps - 320kbps
	WMA	32kbps – 384kbps
Audio	Earphone Output Power	L: 275mV (32 Ohm) R: 275mV (32 Ohm)
	Frequency Response	20Hz – 20,000Hz
	SNR	80dB
Operation Temperature	-0°C - 40°C	
Operation Systems	Windows 98/SE/ME2000/XP/Vista/Win7, MAC9.2 or above	

Note: Product design and specification are subject to change without prior notice.

I. Recycling



If at any time in the future you should need to dispose of this product, please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or Retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

For information and support, www.lenco.eu